



# IMPRESSA X9

## Abbreviated guidelines




**IMPRESSA**  
*if you love coffee*

## Contents

Device definition .....	page 4
Programming keypad .....	page 4
Reference key .....	page 4
Legend .....	page 4
First use .....	page 5
Cleaning the milk system .....	page 6
Cleaning the dual spout .....	page 6
Cleaning the coffee system .....	page 7
Decalcifying .....	page 8
Installing the filter .....	page 9
Changing the filter .....	page 9

# Device definition

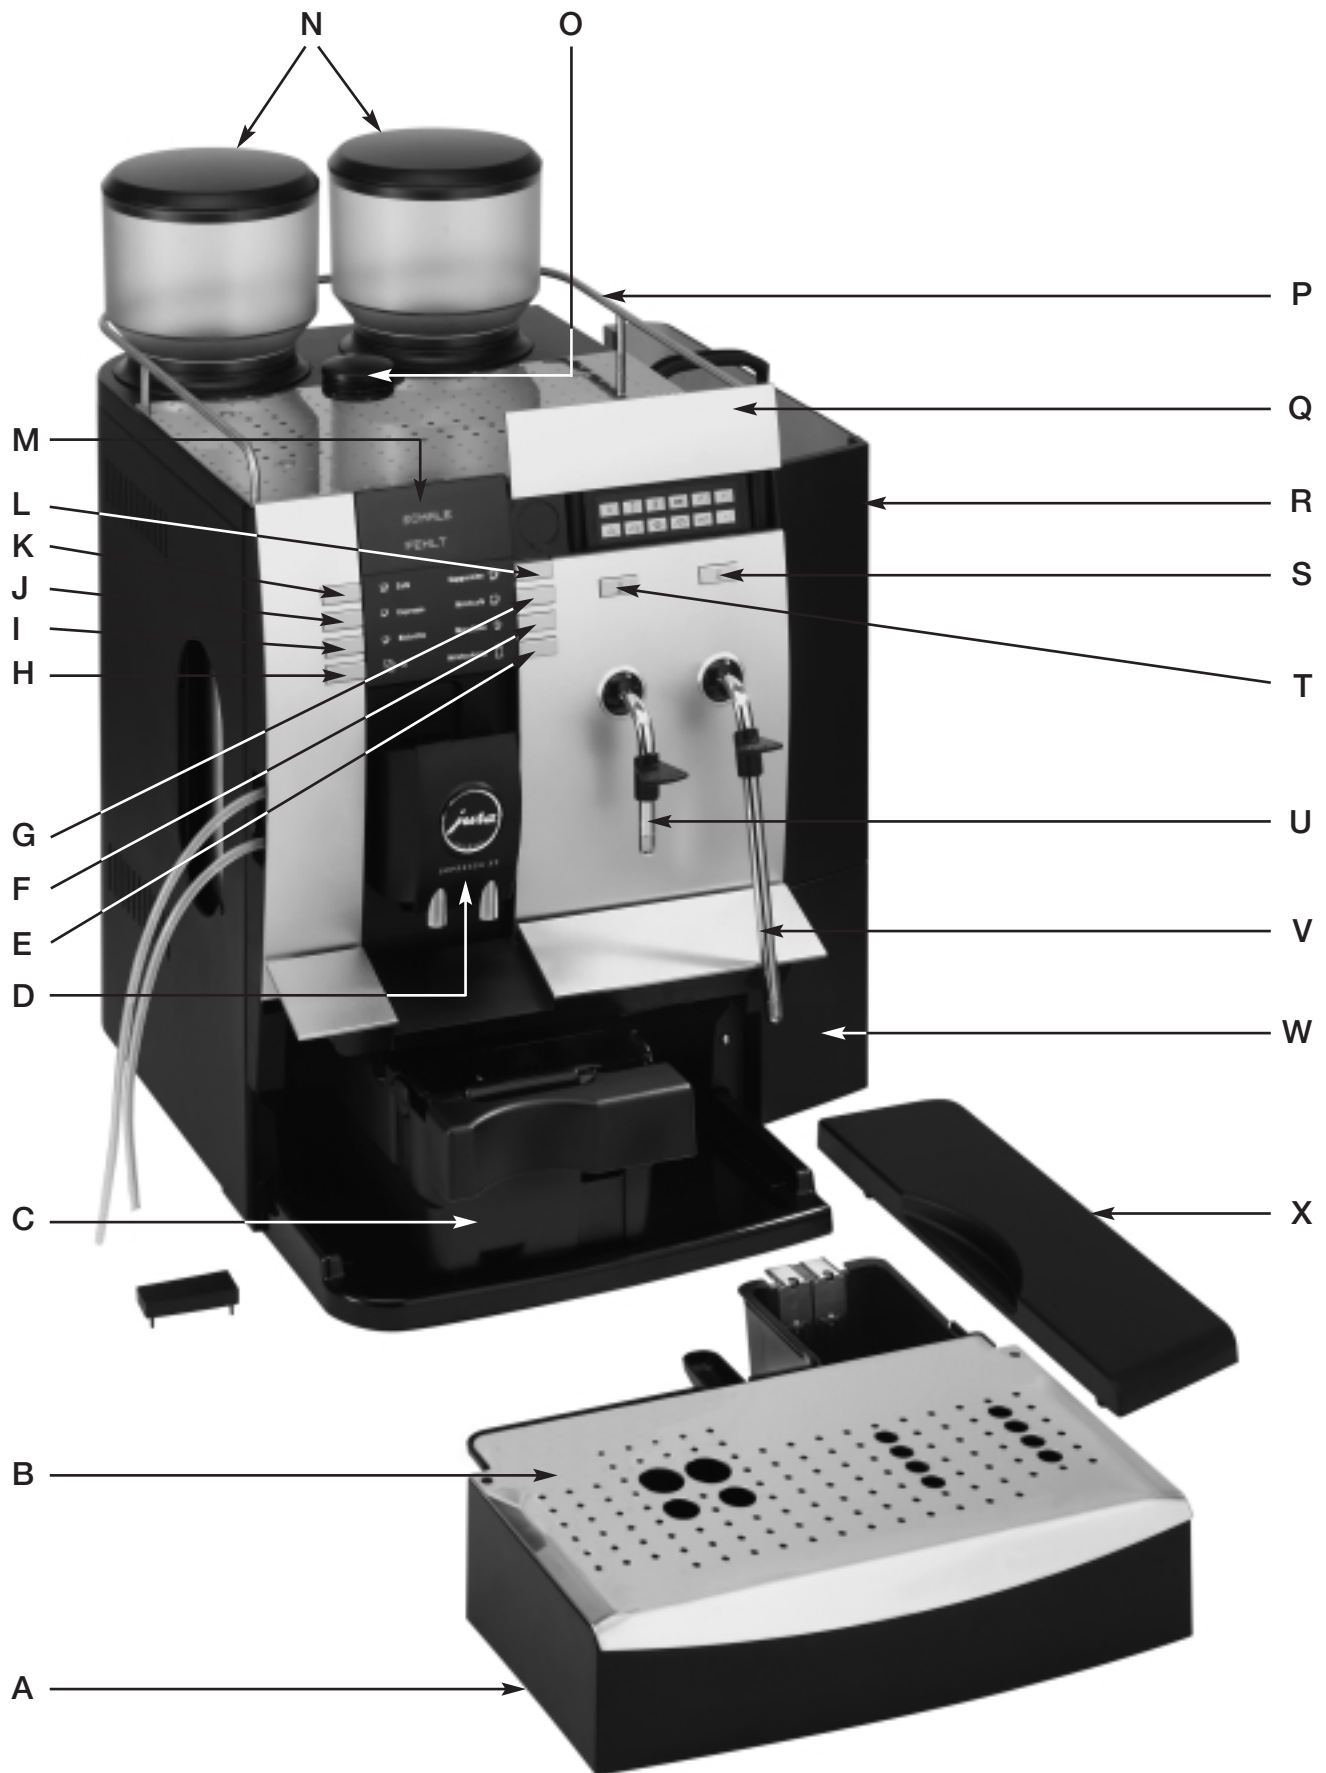

## Device definition

- |                                |  |
|--------------------------------|--|
| A Drip tray                    | M Display dialog system (incl. graphics display) |
| B Drip grate                   | N Bean tank                                      |
| C Grounds bin                  | O Filler funnel for cleaning tablet              |
| D Height-adjustable dual spout | P Cup railing                                    |
| E Frothing key                 | Q Cover for programming keys                     |
| F Macchiato key                | R Water tank                                     |
| G Milk Coffee key              | S Steam key                                      |
| H 2x key                       | T Hot Water key                                  |
| I Ristretto key                | U Pivoting hot water spout                       |
| J Espresso key                 | V Pivoting steam spout                           |
| K Coffee key                   | W Accessories drawer                             |
| L Cappuccino key               | X Water tank cover                               |



## Programming keypad

- |  |   |
|--|---|
| A ON / OFF                                       | G Rinse   |
| B Filter   | H Clean milk system                             |
| C Decalcify                                      | I Clean coffee system                           |
| D Counter  | J Clean dual spout                              |
| E Access programming mode                        | K EXIT  |
| F +<br>(Page through parameters / higher values) | L –<br>(Page through parameters / lower values) |



## Reference key

- |             |                |
|-------------|----------------|
| 1 COFFEE    | 5 CAPPUCCINO   |
| 2 ESPRESSO  | 6 MILK COFFEE  |
| 3 RISTRETTO | 7 MACCHIATO    |
| 4 2 x       | 8 FROTHED MILK |

## Legend:

- DISPLAY** (grey box) DISPLAY: serves as information. Continuous text.
- GRAPHICS DISPLAY** (white box) GRAPHICS DISPLAY: please follow the instructions shown.



= Note



=Important

## First use

**!** Make sure to have filled the water tank and the bean tank.

Switch the IMPRESSA X9 on with the power switch on the rear of the machine.



- Open the programming door on the front (Q).
- Switch the IMPRESSA X9 on with the ON / OFF key (A).

SPRACHE  
DEUTSCH



- Select a language of your choice by pressing the «+» or «-» key (F or L)

LANGUAGE  
ENGLISH



- Press P to save your selection (E).

CONFIRMED  
✓

TIME  
HOURS  
-:-



- Set the hours by pressing the «+» or «-» key (F or L).
- Press P to save your setting (E).

TIME  
MINUTES  
12:00



- Set the minutes by pressing the «+» or «-» key (F or L).
- Press P to save your setting (E).

CONFIRMED  
✓

PRESS RINSE



- Press the Rinse key (G).

SYSTEM FILLI

WELCOME TO  
*jura*

MACHINE HEAT

PRESS RINSE



- Place a cup under the height-adjustable dual spout (D).
- Press the Rinse key (G)

RINSING

COFFEE READY

- Unit is ready.

## Cleaning the milk system

**!** Once started, the cleaning process must not be interrupted. It takes approx. 2 minutes.



- Open the programming door on the front (Q).
- Switch the IMPRESSA X9 on with the ON / OFF key (A).
- Press the Clean Milk System key (H)
- Place a receptacle with a capacity of at least 0.5 litres under the height-adjustable dual spout (D).
- Fill a receptacle with approx. 4 dl of water and add 1 1/2 capfuls of JURA cappuccino cleaning agent. Dip the two milk hoses into this solution.

CLEANER FOR

PRESS  
KEY



- Press the Clean Milk System key (H)

MACHINE CLEAR

WATER FOR C

PRESS  
KEY



- Press the Clean Milk System key (H)

MACHINE CLEAR

COFFEE READY

- Unit is ready.

## Cleaning the dual spout

**!** After having dispensed 220 products or after 80 rinsing cycles, the machine must be cleaned. The machine will still make coffee or hot water/steam. However, we recommend that you run a cleaning cycle within the same day.

COFFEE READY

CLEAN

or

CLEAN NOW

**!** Once started, the cleaning process must not be interrupted. It takes approx. 20 minutes.



- Open the programming door on the front (Q).
- Switch the IMPRESSA X9 on with the ON / OFF key (A).
- Press Clean Dual Spout (J)

EMPTY

TRAY

- Remove the tray (A).

EMPTY

COFFEE  
BIN

- Remove the grounds bin (C).

CLEANER FOR

PRESS  
KEY



- Fill a receptacle with approx. 4 dl of water and add 1 1/2 capfuls of JURA cappuccino cleaning agent. Dip the two milk hoses into the solution

- Place a sufficiently large receptacle under the height-adjustable dual spout (D).
- Press the Clean Dual Spout key (J)

MACHINE CLEA

ADD TABLET

PRESS  
KEY



- You will hear an acoustic signal.
- Drop a JURA cleaning tablet into the filler funnel (O).

- Press the Clean Dual Spout key (J)

MACHINE CLEA

WATER FOR C

PRESS  
KEY



- You will hear an acoustic signal.
- Fill a receptacle with approx. 0.4 litres of fresh water and dip the milk hoses into it.

- Press the Clean Dual Spout key (J)

MACHINE CLEA

EMPTY

TRAY

EMPTY

COFFEE  
BIN

COFFEE READY

- You will hear an acoustic signal.
- Remove the tray (A).
- Remove the grounds bin (C).

- Unit is ready.

## Cleaning the coffee system

COFFEE READY

CLEAN

or

CLEAN NOW

**!** Once started, the cleaning process must not be interrupted. It takes approx. 15 minutes.



- Open the programming door on the front (Q).
- Switch the IMPRESSA X9 on with the ON / OFF key (A).
- Press the Clean Coffee System key (I)

EMPTY

TRAY

EMPTY

COFFEE  
BIN

- You will hear an acoustic signal.
- Remove the tray (A).
- Remove the grounds bin (C).

PRESS  
KEY



MACHINE CLEA

ADD TABLET  
PRESS  
KEY



MACHINE CLEA

EMPTY  
TRAY

EMPTY  
COFFEE  
BIN

COFFEE READY

- Place a sufficiently large receptacle under the height-adjustable dual spout (D).

- Press the Clean Coffee System key (I)

- You will hear an acoustic signal.
- Drop a JURA cleaning tablet into the filler funnel. (O)

- Press the Clean Coffee System key (I)

- You will hear an acoustic signal.
- Remove the tray (A).

- Remove the grounds bin (C).

- Unit is ready.

## Decalcifying

**!** We recommend that you decalcify the machine within the same day. If you make more coffees, the display will indicate DECALCIFY. After yet even more coffees made, the display will read DECALCIFY NOW.

COFFEE READY  
DESCALE

**!** Once started, the decalcifying program must not be interrupted. It takes approx. 40 minutes.

When using acidic decalcifying agents, immediately remove any splashes or drops from sensitive surfaces, in particular surfaces made of natural stone or wood, or take appropriate preventive measures.



EMPTY  
TRAY

EMPTY  
COFFEE  
BIN

SOLVENT IN T  
PRESS  
KEY



MACHINE DECA

EMPTY  
TRAY

- Open the programming door on the front (Q).
- Switch the IMPRESSA X9 on with the ON / OFF key (A).
- Press the Decalcify key (C)

- You will hear an acoustic signal.
- Remove the tray (A).
- Remove the grounds bin (C).

- Completely dissolve 3 JURA tablets in 0.7 litres of water and pour the solution into the empty water tank (14).

- Place 3 sufficiently large receptacles under the heightadjustable dual spout, the steam spout and the hot water spout (D).
- Press the Decalcify key (C)

- You will hear an acoustic signal.
- Remove the tray (A).



EMPTY  
COFFEE  
BIN

WATER TANK  
RINSE/F

PRESS  
KEY

MACHINE DECA

CAPPUCCINO  
RINSING

EMPTY  
TRAY

EMPTY  
COFFEE  
BIN

COFFEE READY

- Remove the grounds bin (C).
- Thoroughly rinse out the water tank and fill it with fresh tap water.
- Press the Decalcify key (C).
- You will hear an acoustic signal.
- Remove the tray (A).
- Remove the grounds bin (C).
- Unit is ready.

### Installing the filter



Initial installation of a Claris filter cartridge needs to be carried out by a service technician. Please contact your service partner.



When using the Claris filter cartridge properly, decalcifying your machine will no longer be necessary.

### Changing the filter



After 50 litres of water, the Claris filter cartridge will need to be replaced. If the capacity exceeds 5%, a message on the display will prompt you to change the filter. If it exceeds 10%, the display will read “CHANGE NOW”

COFFEE READY  
CHANGE  
FILTER



INSERT FILTE  
PRESS  
WATER



FILTER RINSE

COFFEE READY

- Open the programming door on the front (Q).
- Switch the IMPRESSA X9 on with the ON / OFF key (A).
- Press the Filter key (B)
- EMPTY the water tank and insert the filter cartridge in the tank
- Fill the water tank with cold, fresh tap water and reinstall it in the machine.
- Place a sufficiently large receptacle under the pivoting hot waterspout (U).
- Press the Hot Water key (T)
- The flow of water stops automatically.
- Unit is ready.